




INSTRUCTION MANUAL

EM-C7586V

Microwave Oven

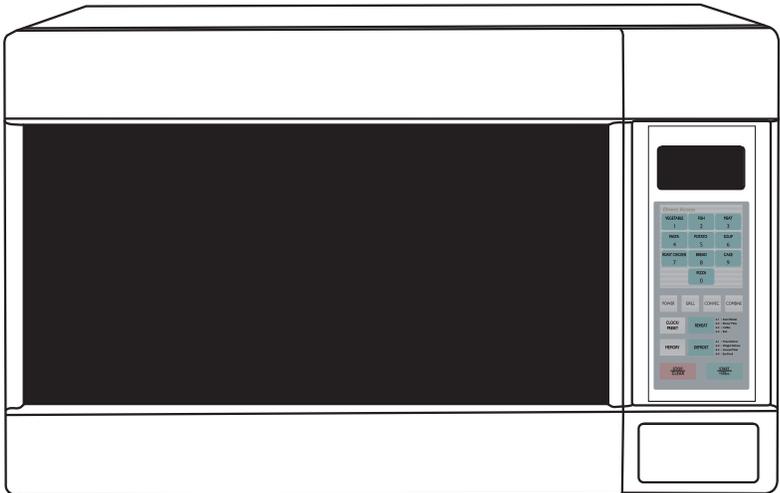

Read these instructions carefully before use.

If you follow these instructions,

your Microwave Oven will serve you long and well.

TABLE OF CONTENTS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Specifications	2
----------------	---

IMPORTANT SAFETY INSTRUCTIONS

Safety	3
Warning	4
To reduce the risk of injury to persons	5
Grounding installation	5
Danger	5
Warning	5
Cleaning	5
Caution	6
Utensils	6
Materials you can use in microwave oven	6
Materials to be avoided in microwave oven	7

SETTING UP YOUR OVEN

Names of oven parts and accessories	7
Turntable installation	8
Countertop installation	8
Installation	8

OPERATION

Control panel and features	9
Operation instruction	10

MAINTENANCE

Troubleshooting	18
-----------------	----

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:**
 - (1) DOOR (bent)**
 - (2) HINGES AND LATCHES (broken or loosened)**
 - (3) DOOR SEALS AND SEALING SURFACE**
- (d) **The oven should not be adjusted or repaired by anyone except properly qualified service personnel.**

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	EM-C7586V AU2
Power Source:	230-240V~50Hz
Power Consumption:	2100W
Output Microwave:	1000W
Input Grill:	1100W
Input Convection:	2100W
Outside Dimension(LxWxH):	518 X 475 X 318 mm
Oven Capacity:	32L
Turntable Diameter:	Ø 31.5cm
Net Weight:	Approx.19 kg

SAFETY

1. The oven must be on a leveled surface.
2. The turntable and turntable roller rest must be in the oven during cooking. Place the cookware gently on the turntable and handle it carefully to avoid possible breakage.
3. Incorrect use of browning dish may cause the turntable to break.
4. Use only the specified bag size when using Direct Access Popcorn.
5. The oven has several built-in safety switches to ensure that the power remains off when the door is open. Do not tamper with these switches.
6. Do not operate the microwave oven empty. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
7. Do not cook bacon directly on the turntable. Excessive local heating of the turntable may cause the turntable to break.
8. Do not heat baby bottles or baby food in the microwave oven. Uneven heating may occur and could cause physical injury.
9. Do not heat narrow-necked containers, such as syrup bottles.
10. Do not attempt to deep-fry in your microwave oven.
11. Do not attempt home canning in this microwave oven, as it is impossible to be sure all contents of the jar have reached boiling temperature.
12. Do not use this microwave oven for commercial purpose. This microwave oven is made for household use only.
13. To prevent delayed eruptive boiling of hot liquids and beverages or scalding yourself, stir liquid before placing the container in the oven and again halfway through cooking time. Let stand in the oven for a short time and stir again before removing the container.
14. Use carefully when cooking food in the microwave oven to avoid burning due to excessive cooking.
15. When the appliance is operated in the combination mode, children should not use the oven without adult supervision due to the temperatures generated.
16. Failure to maintain the oven in a clean condition could lead to deterioration that could adversely affect the life of the appliance and possibly result in a hazardous situation.
17. Please be advised that this microwave oven is not to be installed in or used within an enclosed cabinet.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Read all instructions before using the appliance.
 2. Read and follow the specific: "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**"
 3. As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity.
- If materials inside the oven ignite:**
1. Keep the oven door closed.
 2. Turn the oven off, and unplug the appliance.
 3. Disconnect the power cord, shut off power at the fuse or circuit breaker panel.
 4. Do not overcook food. Carefully attend the appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 5. Do not use the oven cavity for storage purposes. Do not store combustible items such as bread, cookies, paper products, etc. inside the oven.
 6. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
 7. This oven must be grounded. Connect only to properly grounded outlet. See "**GROUNDING INSTRUCTIONS**".
 8. Install or locate this oven only in accordance with the installation instructions provided.
 9. Some products such as whole eggs, water with oil or fat, sealed to explode and therefore should not be heated in this oven.
 10. As with any appliance, close supervision is necessary when used by children.
 11. Use this appliance only for its intended uses as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
 12. Do not operate this oven if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped.
 13. This appliance should be serviced only by qualified service technicians. Contact the nearest authorized service facility for examination, repair or adjustment.
 14. Do not cover or block any vents on the oven.
 15. Do not store or use this appliance outdoors.
 16. Do not use this oven near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
 17. Do not immerse cord or plug in water
 18. Keep cord away from heated surfaces.
 19. Do not let cord hang over edge of table or counter
 20. When cleaning door and oven surfaces use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.
 21. This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.

22. Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. This could result in very hot liquids suddenly boiling over when the container is disturbed or a spoon or other utensil is inserted into the liquid.

- i) Do not overheat the liquid.
- ii) Stir the liquid both before and halfway through heating it.
- iii) Do not use straight-sided containers with narrow necks.
- iv) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- v) Use extreme care when inserting a spoon or other utensil into the container.

To Reduce the Risk of Injury to Persons

Grounding Installation

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

CLEANING

Be sure to disconnect the oven from the power supply.

1. Clean the inside of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighboring parts must be cleaned carefully with a damp cloth when they are dirty.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2)The extension cord must be a grounding-type 3-wire cord.
 - 3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CAUTION

Personal Injury Hazard

Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

UTENSILS

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils Remarks

Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils Remarks

Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


SETTING UP YOUR OVEN

Names of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories.

- Glass tray 1
- Turntable ring assembly 1
- Instruction Manual 1
- Grill rack 1

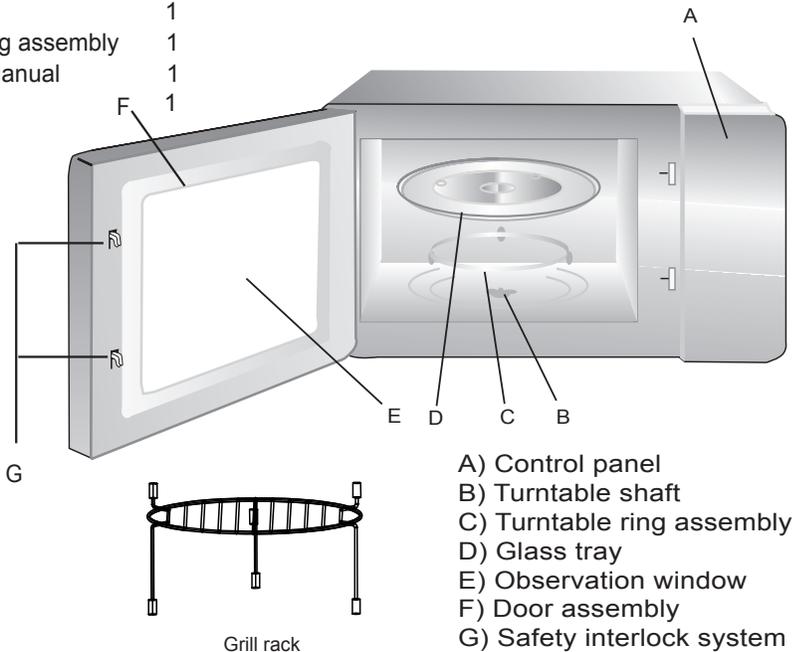

Turntable Installation

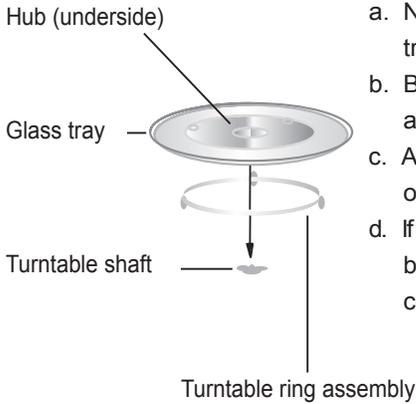

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

Installation

- Select a level surface that provide enough open space for the intake and/or outlet vents.

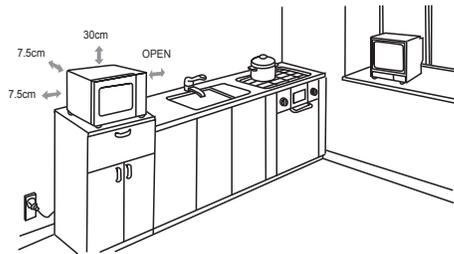

A minimum clearance of **7.5cm** is required between the oven and any adjacent walls. One side must be open.

- Leave a minimum clearance of 30cm above the oven.
- Do not remove the legs from the bottom of the oven.

- Blocking the intake and/or outlet openings can damage the oven.
 - Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
- Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.


WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.




OPERATION

Control Panel and Features

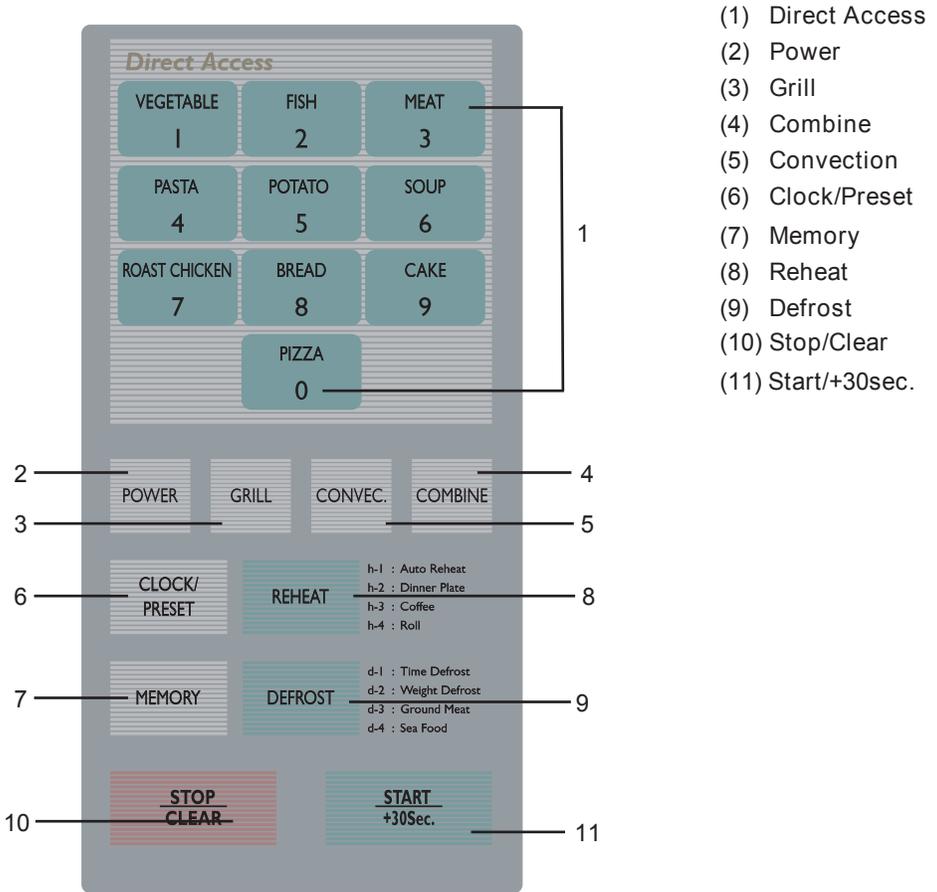

- (1) Direct Access
- (2) Power
- (3) Grill
- (4) Combine
- (5) Convection
- (6) Clock/Preset
- (7) Memory
- (8) Reheat
- (9) Defrost
- (10) Stop/Clear
- (11) Start/+30sec.

Display Window

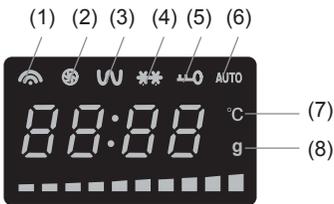

- (1) Microwave
- (2) Convection
- (3) Grill
- (4) Defrost
- (5) Lock function for children
- (6) Auto cook
- (7) °C Temperature
- (8) g Gramme

OPERATION INSTRUCTION

1. Clock Setting

When the microwave oven is electrified, the oven will display "0:00", buzzer will ring once. The input time should be within 0:00--23:59(24 Hour), or 1:00--12:59(12 Hour).

Example: To set 12:12 .

- (1) Press " CLOCK/PRESET " once to select 24 hours system and twice for 12 hours system, at the same time, "24H" or "12H" will display.
- (2) Press the number buttons of "1","2","1","2" in order.
- (3) Press " CLOCK/PRESET " to finish clock setting. ":" will flash, and the time will light.

Note: 1) If the clock is not set, it would not function when powered.

- 2) During the process of clock setting, if you press "STOP/CLEAR", the oven will go back to the previous status automatically.

2. Microwave Cooking

Select different microwave power level and set cooking time as you wish. There are five power levels available for choosing. Keep pressing " POWER " to choose the power.

Example: If you want to use 80% microwave power to cook for 10 minutes, you can operate the oven as the following steps.

- 1) Press " POWER " once, the oven will display "P100", "☺" indicator will light.
- 2) Press " POWER " once again to choose 80% power, the oven will display "P80".
- 3) Press the number buttons of "1","0","0","0" in order, the oven will display "10:00"
- 4) Press "START/+30SEC. " to start cooking, ":" will light and the "☺" indicator will flash.

Note: "POWER" Pad presses instructions

Presses Instructions	Display	Microwave Power
1	P100	100%
2	P 80	80%
3	P 50	50%
4	P 30	30%
5	P 10	10%

3. Grill Cooking

Example: If you want to use 100% to cooking for 35 minutes, you can operate the oven as the following steps.

- 1) Press the "GRILL" key , the oven will display " G-1 ", at the same time "  " will light.
- 2) Press the number buttons of "3","5","0","0" in order, the oven will display "35:00".
- 3) Press the "START/+30SEC. " key to start cooking. The "  " will flash, ":" will light.

4. Convection Cooking(With preheating function)

The convection cooking can let you to cook the food as a traditional electric oven. Microwave is not used. It is recommended that you would preheat the oven to the appropriate temperature before placing the food in the oven.

- 1) Press the " CONVEC." key several times, the oven will display "180". At the same time, " °C", "  " will light. (Press the "CONVEC. " key several times to select the temperature.)
- 2) Press the " START/+30SEC. " key to start cooking. The temperature figure will flash when reach to the temperature in advance and buzzer will ring twice to remind you to put the food into the oven.
- 3) Press the number buttons of "4","0","0","0" in order, the oven will display "40:00".
- 4) Press the "START/+30SEC. " key to start cooking. The "  " will flash, ":" will light.

5. Convection Cooking(Without preheating function)

- 1) Press the " CONVEC." key once, the oven will display "140". At the same time, " °C " , "  " will light. (Press the "CONVEC." key several times to select the temperature.)
- 2) Press the number buttons of "4", "0", "0", "0" in order, the oven will display "40:00".
- 3) Press the "START/+30SEC." key to start cooking. The "  " will flash, ":" will light.

Note: " CONVEC." Pad presses instructions

Presses Instructions	Display	Convection
1	140 ⁰ C	
2	150 ⁰ C	

3	160 ⁰ C	●
4	170 ⁰ C	●
5	180 ⁰ C	●
6	190 ⁰ C	●
7	200 ⁰ C	●
8	210 ⁰ C	●
9	220 ⁰ C	●
10	230 ⁰ C	●

6. Combination Cooking

Example: If you want to use combination cook (C-1) for 40 minutes, you can operate the oven as per the following steps.

1) Press the "COMBINE" key once, the oven will display "C-1".

At the same time, "☒" and "☑" will light.

2) Press the number buttons of "4", "0", "0", "0" in order, the oven will display "40:00".

3) Press the "START/+30SEC." key to start cooking. The "☑", "☒" will flash, ":" will light.

Note: "COMBINE" Pad presses instructions

Presses Instructions	Display	Microwave Power	Grill	Convection
1	C-1	●		●
2	C-2	●	●	
3	C-3		●	●
4	C-4	●	●	●

6. Delay Start

Example: To start a cooking at 12:12.

- (1) First, set the clock, then set the cooking program you want (not including defrost function).
Please refer to the instructions from P.10-12.
- (2) Press "CLOCK/PRESET " to display 0:00.
- (3) Press "1", "2", "1", "2" in order.
- (4) Press "START/+30SEC." to confirm the setting. The unit will turn back to the clock state.
- (5) Cooks begin when the time arrives, ":" will light.

7. Reheat

- 1) Press "REHEAT" pad , the "h-1" will display in oven and flash."  " and " $\mu\tau\omicron$ " indicators will light (Press the "REHEAT " pad several times to select the the cooking program you wanted.)
- 2) Press " START/+30SEC. " key to confirm, the "h-1" will display.
- 3) Press "REHEAT" pad, the oven will display "150"."  and " **AUTO**" and "g" indicators will light. (Press the " REHEAT " pad several times to select the weight of the cooking food.)
- 4) Press "START/+30SEC. " key to start cooking.

Reheat Chart

Menu	Quantity	Display
h-1 (Auto Reheat)	150g	150
	250g	250
	350g	350
	450g	450
	600g	600
h-2 (Dinner Plate)	250g	250
	350g	350
	450g	450
h-3 (Coffee)	1 cup (approximately 240g)	1
	2 cup (approximately 480g)	2
	3 cup (approximately 720g)	3
h-4 (Roll)	1 piece (approximately 70g)	1
	2 pieces (approximately 140g)	2
	3 pieces (approximately 210g)	3

8. Defrost By time

- 1) Press "DEFROST" once, the oven will display "d-1".
- 2) Input the figure of the time of cooking. "  ", " ** " indicators will light. (The maximum cooking time is 99 minutes and 99 seconds.)
- 3) Press "START/+30SEC. " key to start defrosting. "  " and " ** " indicators will flash.

9. Defrost By weight

- 1) Press "DEFROST" pad twice, the oven will display "d-2".
- 2) Input the figure of the weight of food.(The input figure of the weight should be within 100--2000g)
- 3) Press "START/+30SEC." key to start defrosting. "  " and " ** " indicators will flash and "g" indicator will go out.

10. Defrost Ground meat

- 1) Press "DEFROST" pad thrice, the oven will display "d-3".
- 2) Input the figure of the weight of food. (The input figure of the weight should be within 100--2000g)
- 3) Press "START/+30SEC." key to start defrosting. "  " and " ** " indicators will flash.

11. Defrost Sea food

- 1) Press "DEFROST" pad 4 times, the oven will display "d-4".
- 2) Input the figure of the weight of food. (The input figure of the weight should be within 100--2000g)
- 3) Press "START/+30SEC." key to start defrosting. "  " and " ** " indicators will flash.

12. Auto Menu Cooking

The number pads 0—9 are matching with ten different subjects respectively.

Pad	Cook	Pad	Cook	Pad	Cook	Pad	Cook
1	VEGETABLE	4	PASTA	7	ROAST CHICKEN	0	PIZZA
2	FISH	5	POTATO	8	BREAD		
3	MEAT	6	SOUP	9	CAKE		

a. Example: Cooking vegetable of 350g:

- (1) Press "VEGETABLE" button, "  " and "AUTO " will light.
- (2) Press "VEGETABLE" button again to choose weight, oven will display "350", "g", "  " and "AUTO " will light.
- (3) Press "START/+30SEC." to start cooking, "g" will go out, time counts down, "  " and "AUTO " will flash.

b. Example: Cooking fish of 350g:

- (1) Press "FISH" button, "  " and "AUTO" will light.
- (2) Press " FISH" button twice again to choose weight, oven will display "350", "g", "  " and "AUTO" will light.
- (3) Press "START/+30SEC./CONFIRM" to start cooking, "g" will go out, time counts down, "  " and "AUTO" will flash.

c. Example: Cooking meat of 300g:

- (1) Press "MEAT" button, "  " and "AUTO" will light.
- (2) Press " MEAT" button again to choose weight, oven will display "300", "g", "  " and "AUTO" will light.
- (3) Press "START/+30SEC./CONFIRM" to start cooking, "g" will go out, time counts down, "  " and "AUTO" will flash.

d. Example: Cooking pasta of 100g:

- (1) Press "PASTA" button, "  " and "AUTO" will light.
- (2) Press " PASTA" button again to choose weight, oven will display "100", "g", "  " and "AUTO" will light.
- (3) Press "START/+30SEC./CONFIRM" to start cooking, "g" will go out, time counts down, "  " and "AUTO" will flash.

e. Example: Cooking potato of 230g:

- (1) Press "POTATO" button, "  " and "AUTO" will light.
- (2) Press " POTATO" button again to choose weight, oven will display "1", "  " and "AUTO" will light.
- (3) Press "START/+30SEC./CONFIRM" to start cooking, time counts down, "  " and "AUTO" will flash.

f. Example: Cooking soup of 400g:

- (1) Press "SOUP" button, "  " and "AUTO" will light.
- (2) Press " SOUP" button again to choose weight, oven will display "400", "g", "  " and "AUTO" will light.
- (3) Press "START/+30SEC./CONFIRM" to start cooking, "g" will go out, time counts down, "  " and "AUTO" will flash.

g. Example: Cooking roast chicken of 750g:

- (1) Press "ROAST CHICKEN" button, "  " and "AUTO" will light.
- (2) Press "ROAST CHICKEN" button again to choose weight, oven will display "750", "g", "  " and "AUTO" will light.
- (3) Press "START/+30SEC./CONFIRM" to start cooking, "g" will go out, time counts down, "  " and "AUTO" will flash.

h. Example: Cooking cake of 475g:

- (1) Press "CAKE" button, "  " and "AUTO" will light.
- (2) Press "CAKE" button to choose weight, oven will display "475", "g", "  " and "AUTO" will light.
- (3) Press "START/+30SEC./CONFIRM" to start cooking, "g" will go out, time counts down, "  " and "AUTO" will flash.

i. Example: Cooking pizza of 300g:

- (1) Press "PIZZA" button, "  " and "AUTO" will light.
- (2) Press "PIZZA" button times to choose weight, oven will display "300", "g", "  " and "AUTO" will light.
- (3) Press "START/+30SEC./CONFIRM" to start cooking, "g" will go out, time counts down, "  " and "AUTO" will flash.

Auto menu Chart

Menu	Quantity	Press Times	Display
Vegetable	150g	Once	150
	350g	Twice	350
	500g	Thrice	500
Fish	150g	Once	150
	250g	Twice	250
	350g	Thrice	350
	450g	4 times	450
	650g	5 times	650
Meat	150g	Once	150
	300g	Twice	300
	450g	Thrice	450
	600g	4 times	600
Pasta	50g (with cold water 450g)	Once	50
	100g (with cold water 800g)	Twice	100
	150g (with cold water 1200g)	Thrice	150
Potato	1 piece (approximately 230g)	Once	1
	2 pieces (approximately 460g)	Twice	2
	3 pieces (approximately 690g)	Thrice	3
Soup	200ml	Once	200
	400ml	Twice	400
	600ml	Thrice	600
Roast Chicken	500g	Once	500
	750g	Twice	750
	1000g	Thrice	1000
	1200g	4 times	1200
Bread	50g	Once	50
	100g	Twice	100
	150g	Thrice	150
Cake	475g	Once	475
Pizza	200g	Once	200
	300g	Twice	300
	400g	Thrice	400

Note: Cake menu is under convection cooking with 180°C-warm-up function, and you should preheat first following the auto menu operation, when the oven reaches the temperature, it will stop working and sound to remind opening the door to put cake in, then press "Start/+30Sec." to start cooking.

13. MEMORY

- 1) Press "MEMORY" key several times to set "memory 1" to "memory 3" program, and the oven will display "1", to "3".
- 2) Set one or two stages program you want.
Example:a) Press "POWER " once to choose 100% microwave power.
b) Press number keys "1","0","0","0" in order to adjust the cooking time.
- 3) Press "MEMORY" key to save the memory program settled, or press "START/+30SEC. " to start cooking and save the program automatically.
- 4) Next time when you want to cook with the memory program which has been set, you just only need to press "MEMORY" key to choose the program wanted and then press "START/+30SEC. " to start cooking.

Note: The memorized programs will be cleared if the oven is unplugged from the outlet. Please re-set the function when re-starting the oven.

14. Multi-Stage Cooking

Three stages of cooking can be maximumly set. If one of the stages is defrosting, it should be put in the first stage, and auto cooking should not be set here. The buzzer will ring once after each stage and the next stage will begin, and auto cooking should not be set here.

Example: If you want to cook the food with 100% microwave power for 10 minutes+ 80% microwave power for 15 minutes. Do it as following:

- 1) Press "POWER " once to choose 100% microwave power.
- 2) Press number keys "1","0","0","0" in order to adjust the cooking time.
- 3) Press "POWER " twice to choose 80% microwave power.
- 4) Press number keys "1","5","0","0" in order to adjust the cooking time.
- 5) Press "START/+30SEC." to start cooking.

15. Speedy Cooking

When the oven is in the waiting states, Press "START/+30SEC." key to start cooking with full microwave power for 30 seconds.(the maximum setting is 99 minutes and 99 senonds)

When the oven is in the combination cooking states, Press "START/+30SEC." key to add 30 seconds cooking time. (In the Defrosting, Multi-stage cooking or Auto Menu state, speedy cooking is not valid.)

16. Inquiring Function

- (1) In cooking state, press "COMBINE","POWER ", or "CONVEC.", and the current power will be displayed for 2~3 seconds.

- (2) In cooking state, press "CLOCK/PRESET " to inquire the time for cooking. The cooking time will flash for 2-3 seconds.
- (3) In pre-set state, press "CLOCK/PRESET " to inquire the time for delay start cooking. The pre-set time will flash for 2-3 seconds.

17. Lock-out Function for Children

Lock: In waiting state, press "STOP/CLEAR" for 3 seconds, there will be a long "beep" denoting entering into the children-lock state and a key "  " will light. The oven will display "0:00" or current time.

Unlock: In locked state, press "STOP/CLEAR" for 3 seconds, there will be a long "beep" denoting that the lock is released and "  " will go out.

18. Display Specification

- (1) In waiting state, the oven will display clock and " : " will flash.
- (2) In function setting state, the oven will display the related setting.
- (3) In the operation and suspending state, the oven will display the residual cooking time.

Trouble shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven is operated. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It does no damage to oven if oven operates empty for quite short time. But it should be avoided.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.

SANYO

SANYO Electric Co., Ltd.