


SANYO

INSTRUCTION MANUAL
ISTRUZIONI PER L'USO


RP-2001

AM/FM Radio
Radio de OM/FM

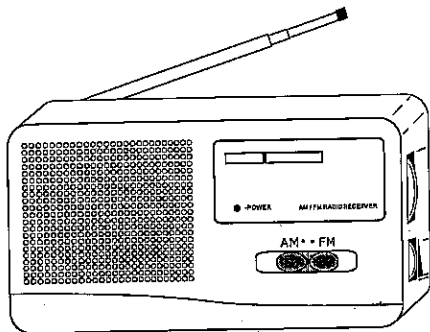

CONTROLES

1. Control de encendido / apagado / volumen
2. Control de sintonización
3. Antena tipo varilla
4. Toma de auriculares
5. Seleccionador de banda
6. Indicador de encendido
7. Indicador de sintonía

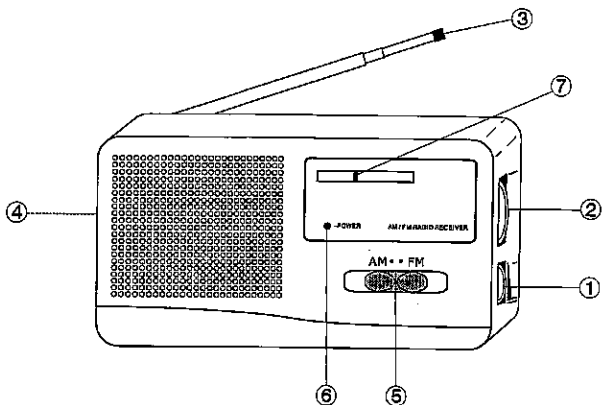

PILAS

- 1) Abra la tapa del compartimiento de pilas.
- 2) Inserte tres pilas de 1,5 voltios de tipo AA en el compartimiento.
- 3) Cierre el compartimiento con la tapa.

Nota: Una pila débil o desgastada puede dispersar sustancias químicas y dañar el equipo, Extraiga las pilas del equipo si este va a estar fuera de uso durante un periodo largo.

OPERACIÓN DE LA RADIO

1. Para encender la radio, gire la rueda de control de encendido / apagado / volumen hacia abajo hasta que se oiga un ligero "clic" y se encienda la lámpara del indicador de encendido.
2. Sitúe el seleccionador de banda a la banda deseada, FM o AM.

(a) Sintonización AM

Para seleccionar la emisora deseada, gire la rueda de control de sintonización. Puede ser deseable girar el equipo para obtener la mejor sintonización. Esto será destacable sobre todo en emisiones débiles o distantes.

(b) Sintonización FM

Extienda la varilla de la antenna, posicionándola para la mejor recepción FM. Para seleccionar la emisora deseada, gire la rueda de control de sintonización.

3. Ajuste el control de volumen al nivel deseado.
4. Para apagar la radio, gire la rueda de control de encendido / apagado / volumen hacia arriba hasta que se oiga un ligero "clic" y se apague la lámpara del indicador de encendido.

TOMA DE AURICULARES

Para el uso personal, inserte el conector de los auriculares (no incluidos) en la toma. El altavoz interno se desactiva automáticamente al conectar los auriculares.

BATTERY

- 1) Open the Battery Door on the back of the unit
- 2) Insert three 1.5 volts AA type batteries into the Battery compartment.
- 3) Closed the Battery Door.

Note: A weak or dead battery may leak and corrode the unit. Always remove the batteries when the unit will not be used for a long period of time.

RADIO OPERATION

1. To turn the radio, turn the On/Off/VOLUME control downward until a slight click is heard and the power indicator is lighted.
2. Slide the Band switch to AM or FM position.

(a) Tuning AM

To select the desired station, turn the Tuning Control. All AM radio have 'DIRECTIONAL' characteristics, it may be desirable to turn the radio until the best reception is obtained. This is particularly noticeable on weak or distant stations.

(b) Tuning FM


3. Extend the Rod Antenna and position it for the best of FM reception. To select the desired station, turn the Tuning Control to a comfortable listening level.
4. To turn the radio off, rotate the Power On/Off/VOLUME control upward until a slight click is heard and the power indicator goes out

HEADPHONE JACK

For private listening, connect an earphone plug (not supplied to this socket. The internal speaker is automatically disconnected when earphone is plugged in.

LOCATION OF CONTROLS

1. ON-OFF / VOLUME CONTROL KNOB
2. TUNING CONTROL KNOB
3. ROD ANTENNA
4. EARPHONE SOCKET
5. BAND SWITCH
6. POWER INDICATOR
7. POINTER

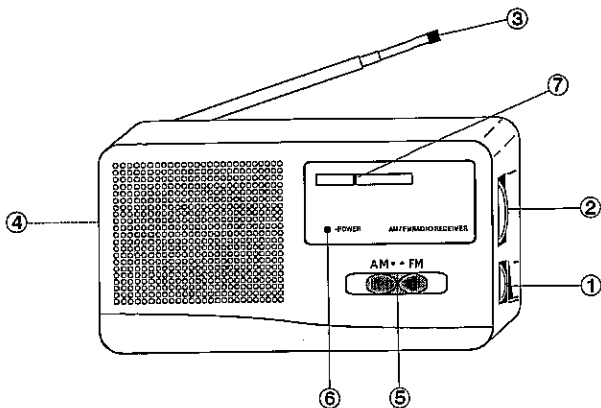

1AD6P1P1589--
(XE)

SANYO

SANYO Electric Co., Ltd.